

## To clean and maintain the product

### 1. Cleaning

Before you clean, please make sure that the switch is in the off location. And the power plug has been pulled out from the socket. Please use dry cloth to clean the product.

### Attention

- Please make sure that do not use benzene or thinner and other aggressive detergents to clean the product. Or the product may fade.

### 2. Maintenance

Make sure that the switch is off, and the power plug has been pulled out from the socket. Keep the product clean and far from the wet environment.

## Technology parameter

Name: Massage Cushion

Type: EMK-136D

Rated Voltage: DC 12V --- 2.5A

Rated Power: 30W



You can scan this QR code to find the product.



 
### Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**EMOKA**  
— 蒙泰 —

# Operating Instructions Massager Cushion

Model No. EMK-136D

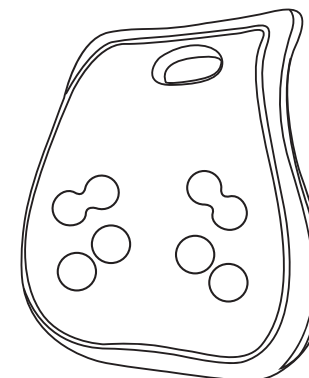

This manual should be kept on hand for easy reference.  
It is your guide to a safe and efficient operation.

**Thank you for choosing a Massager Cushion.  
Please read all instructions before use.**

## **Safety precautions**

To ensure proper operation of this appliance, please read carefully all the safety precautions before use. The safety precautions are provided to help you with the correct and safe operation of this appliance so that you may avoid injuries to yourself and others as well as damage to property. The safety precautions are defined as follows.

### **ALWAYS FOLLOW THESE IMPORTANT SAFETY PRECAUTIONS!**

#### **⚠WARNING:**

This message indicates potentially hazardous actions and situations, which, if not avoided, could result in death or serious injury.

#### **⚠CAUTION:**

This message indicates potentially hazardous actions and situations, which, if not avoided, could result in personal injury or property damage.

#### **⚠WARNING!**

■ **Do not use this product near a full bath, sink, or any vessel containing water.**

■ **Do not use the appliance by persons who are unable to feel heat.**

– Doing so may result in burns or scalding.

■ **Do not use the appliance for uses other than body care.**

– Doing so may result in burns, scalding, electric shock, injury or health problems.

■ **Immediately stop using if you experience any pain or abnormalities on your skin or throughout your body.**

**The following persons should not use this appliance.**

- Women who are pregnant or currently in a menstrual period  
(May cause skin problems due to hormone imbalance.)

- Persons who have allergies
  - Persons with skin diseases, atopic dermatitis, or sensitive skin
  - Persons with skin problems, such as dermatitis, severe sunburns, etc.
  - Persons with skin injuries, eczema, swelling, etc.
- Failure to do so may result in problems with skin or body.

■ **When unplugging the plug or appliance plug, hold the plug or appliance plug by its outer casing.**

**(Do not touch any metal part on the plug.)**

**Unplug when performing maintenance.**

– Failure to do so may result in accident or injury.

■ **Turn the power off and unplug when not using.**

– Failure to do so may result in fire or ignition.

■ **Periodically clean to ensure dust does not accumulate on the plug and appliance plug.**

– Humidity, etc., may cause the insulation to fail.

■ **If there is any damage to any component of the power cord, replace it with a dedicated power cord or with a new component of a dedicated power cord bought from the manufacturer or maintenance department.**

**Always use the power cord specific to the appliance. In addition, do not use the power cord with any other appliance.**

– Failure to do so may result in fire.

■ **When storing, do not wrap the power cord around the appliance.**

– Doing so may cause deformation of the cord, and appliance failure.

■ **Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the appliance.**

**Ensure that the plug and appliance plug are plugged in completely.**

– Failure to do so may result in fire, electric shock, burns or scalding.

■ **Do not use the appliance under the following conditions.**

- When the cord or plug is damaged or becomes hot.
- When the plug is loose in the power outlet.

Do not damage, modify, unreasonably bend, pull, or twist the cord.

Do not place anything heavy on the cord and do not pinch the cord.

Do not let pins or dirt get attached to the end of the appliance plug.

– Doing so may result in fire, electric shock, short circuit, burns or scalding.

■ **Do not plug or unplug the plug and appliance plug into power outlets and the main unit with wet hands. In addition, do not use the appliance with wet hands.**

– Doing so may result in electric shock or short circuit.

■ **Do not use or store the appliance in bathroom or in other rooms with high humidity. Do not place the appliance where it may get wet (such as next to wash basin).**

– Doing so may result in electric shock or fire due to insulation deterioration.

■ **Store in a location that is out of the reach of infants. Do not allow infants to use the appliance.**

**Do not allow a child to lick the appliance plug.**

– Doing so may result in burns, electric shock or scalding.

■ **Do not use the appliance near flammable substances (alcohol, thinner, benzine, enamel remover, aerosol sprays, etc.).**

– Doing so may result in explosion or fire.

■ **Do not immerse the appliance in water.**

– Cleaning and user maintenance shall not be made by children without supervision.

– Doing so may result in fire, electric shock, short circuit or burns.

■ **Do not drop or hit the appliance. If this appliance sustains damage from being dropped or hit, please do not continue to use it.**

– Doing so may result in electric shock or fire.

■ **Do not insert metal objects such as pins, wires, or any other foreign objects in the main unit.**

– Doing so may result in electric shock.

■ **Do not attempt to modify, disassemble, or repair the appliance. Contact the store where the appliance was purchased or an authorized Panasonic service center for repairs.**

– Doing so may cause injury due to fire or abnormal operation.

 
 
**⚠ CAUTION!**

■ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

■ Properly dispose the package of the appliance, keep the package away from infants to prevent suffocation of infants from happening.

■ After use, the appliance should be cleaned to avoid the accumulation of grease and other residues.

## Parts identification

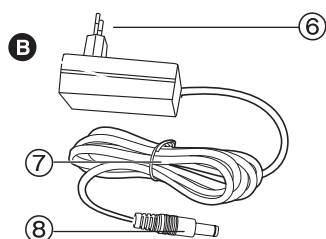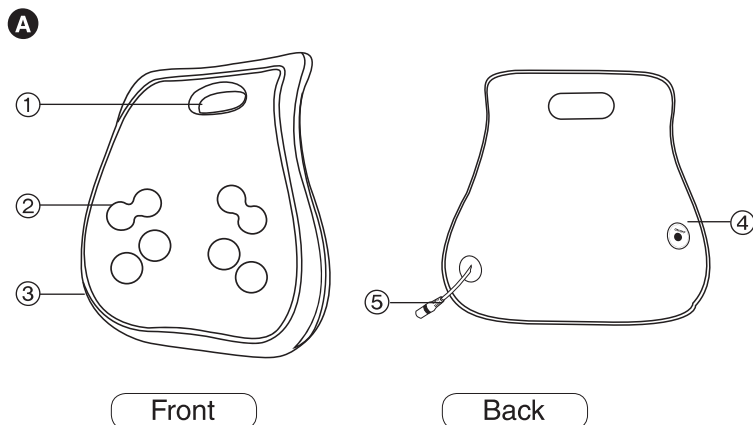

### A Main unit

- ① Handle
- ② Massage head
- ③ Zipper
- ④ Power switch
- ⑤ Dc connector

### B Power adaptor

- ⑥ Plug
- ⑦ Cord
- ⑧ Appliance plug

## How to operate

1. Start: connect the power supply, and press the button, then the product is activated, and the function is kneading and heating.
2. Function: when the product is working, press the button to decide whether to heat or not.
3. Close: press the button for 3 seconds, then the product will be power off, and finish all function.
4. Kneading with heating, reversing after one minute, auto timer of 20 minutes, use the button to decide whether to heat or not during operation.

### 3D massage heads

All-new 3D massage heads, adoption ergonomic, provide new massage style.

### Application position

Enjoy the massage at any parts of body.



### Massage at any time

Suitable in the office, home or car.

### Two Modes

As starting the machine, the light is green, press the power key once, the light is red with heating function.

### Exterior

Both hands grip design, can easily be adjusted for massaging and enjoying on different parts of the body.